


Orientation Installation Guide for Bulldog III

1. Ensure the button is securely mounted on a flat surface with the factory supplied rubber gasket.
3. Position the button in a vertical orientation.
4. Ensure the beeper holes are facing downwards or parallel to the ground.
5. Test the button to ensure proper functionality before finalizing installation.



Install Bulldog vertically.

Speaker holes must face ground or parallel to the ground.

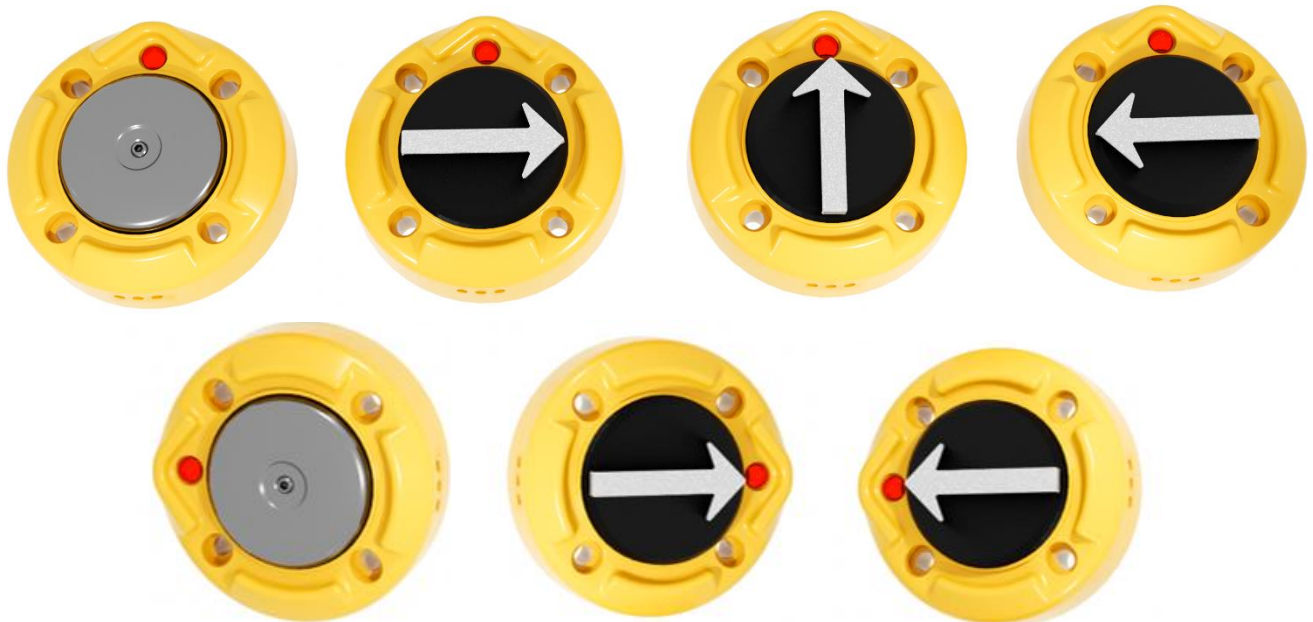

The warranty is null and void in situations where failure occurs due to products not being installed per factory instructions and/or modifications or repair attempts to the equipment were made by the customer.